

Radio Control Surface Frequencies

Listed below are the frequencies and channel numbers for the 75 mhz and 27 mhz bands. The 49 mhz band is listed because several RTR toy boats use this frequency.

75 mhz

Channels 61-90:

<u>Channel</u>	<u>Frequency</u>	<u>Channel</u>	<u>Frequency</u>
61 -----	75.41	76 -----	75.71
62 -----	75.43	77 -----	75.73
63 -----	75.45	78 -----	75.75
64 -----	75.47	79 -----	75.77
65 -----	75.49	80 -----	75.79
66 -----	75.51	81 -----	75.81
67 -----	75.53	82 -----	75.83
68 -----	75.55	83 -----	75.85
69 -----	75.57	84 -----	75.87
70 -----	75.59	85 -----	75.89
71 -----	75.61	86 -----	75.91
72 -----	75.63	87 -----	75.93
73 -----	75.65	88 -----	75.95
74 -----	75.67	89 -----	75.97
75 -----	75.69	90 -----	75.99

27 mhz

This band is mostly used for toys along with 49 mhz. Some R/C Radio manufacturers offer radios on 27mhz. The frequencies on the 27 MHz band have another distinguishing characteristic. They also are designated by color.

<u>Channel</u>	<u>Frequency</u>	<u>Color</u>
1	26.995	Brown
2	27.045	Red
3	27.095	Orange
4	27.145	Yellow
5	27.195	Green
6	27.255	Blue

49 mhz

This band is mostly used for toys along with 27 mhz.

49.830
49.845
49.860
49.875
48.890